

Kramer Electronics, Ltd.



USER MANUAL

Models:

TP-107AVR, *XGA/Audio Line Transmitter*

RC-108, *Presentation Controller*

RC-116, *Presentation Controller*

BoardView™ Kits:

Kit 2AVR: TP-107AVR (2 units) and TP-122

Kit 4AVR: TP-107AVR (4 units) and TP-122

Kit 8AVR: TP-107AVR (8 units) and TP-122

Contents

1	Introduction	1
2	Getting Started	2
2.1	Quick Start	2
3	Overview	4
3.1	About the TP-107AVR/TP-122 Kits	4
3.2	Controlling via the RC-108 and RC-116 Presentation Controllers	6
3.3	Shielded Twisted Pair (STP)/Unshielded Twisted Pair (UTP)	6
3.4	About the Power Connect™ Feature	6
3.5	Recommendations for Achieving the Best Performance	7
4	Your Line Transmitter, Receiver and Presentation Controllers	7
4.1	Your TP-107AVR XGA/Audio Line Transmitter	8
4.2	Your TP-122 XGA/Audio Line Receiver	9
4.3	Your RC-108/RC-116 Presentation Controller	11
5	Configuring a TP-107AVR System	13
5.1	Connecting the TP-107AVR/TP-122 Transmitter/Receiver System	13
5.2	Connecting the TP-107AVR/TP-122 BoardView™ Kit	15
5.3	Configuring the TP-107AVR/TP-122 Kit with the RC-108	16
5.4	Wiring the CAT 5 LINE IN/LINE OUT RJ-45 Connectors	17
5.5	Connecting via the K-NET™	17
5.6	Setting the Address Number of the TP-107AVR	18
6	Controlling the TP-107AVR	19
6.1	Controlling the TP-107AVR/TP-122 Kit via the RC-108	19
6.2	Controlling the TP-107AVR/TP-122 Kit via an RS-485 Controller	19
6.2.1	RS-485 Communication Protocol	21
7	Installing a Remote Button	22
8	Flash Memory Upgrade	23
8.1	Downloading from the Internet	23
8.2	Connecting the PC to the RS-232 Port	23
8.2.1	Connecting the RC-108 to a PC via RS-232	23
8.3	Upgrading the Firmware	24
9	Technical Specifications	29

Figures

Figure 1:	TP-107AVR/TP-122 Configuration	5
Figure 2:	TP-107AVR XGA/Audio Line Transmitter	8
Figure 3:	TP-122 XGA/Audio Line Receiver	9
Figure 4:	TP-122 XGA/Audio Line Receiver (Underside)	10
Figure 5:	RC-108 Presentation Controller	11

Figure 6: RC-116 Presentation Controller	11
Figure 7: RC-108 Underside Panel	12
Figure 8: RC-116 Underside Panel	12
Figure 9: Connecting the XGA/Audio Line Transmitter/Receiver System	14
Figure 10: Connecting the TP-107AVR	15
Figure 11: Configuring the TP-107AVR/TP-122/RC-108 System	16
Figure 12: CAT 5 PINOUT	17
Figure 13: Wiring the RS-485 Connector	17
Figure 14: Rotary Switch Settings	18
Figure 15: Wiring to an RS-485 Controller	20
Figure 16: Connecting a PC without using a Null-Modem Adapter	24
Figure 17: Splash Screen	24
Figure 18: Atmel – Flip Window	25
Figure 19: Device Selection Window	25
Figure 20: Device Selection Window	26
Figure 21: Loading the Hex	26
Figure 22: RS-232 Window	27
Figure 23: Atmel – Flip Window (Connected)	27
Figure 24: Atmel – Flip Window (Operation Completed)	28

Tables

Table 1: Single Units	1
Table 2: BoardView™ Kit Options	1
Table 3: Connecting a Power Adapter to a System	2
Table 4: TP-107AVR XGA/Audio Line Transmitter Features	8
Table 5: TP-122 XGA/Audio Line Receiver Features	9
Table 6: TP-122 XGA/Audio Line Receiver (Underside) Features	10
Table 7: RC-108/RC-116 Presentation Controller Features	11
Table 8: RC-108/RC-116 (Underside Panel) Features	12
Table 9: CAT 5 PINOUT	17
Table 10: Rotary Switch Setting Features	18
Table 11: RS-485 Communication Protocol (Address Number 0 – 127)	21
Table 12: RS-485 Communication Protocol (Address Number 128 – 255)	22
Table 13: Remote PINOUT	22
Table 14: Technical Specifications of the TP-107AVR	29
Table 15: Technical Specifications of the RC-108/RC-116	29

1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups¹ that are clearly defined by function.

Thank you for purchasing the Kramer **TP-107AVR** *XGA/Audio Line Transmitter*, and/or the **RC-108** and/or **RC-116** *Presentation Controllers* and/or the *BoardView™* kits (specified in [Table 2](#)), which are ideal for presentation and multimedia applications.

This user manual² is supplied with each machine (see [Table 1](#)) and kit (see [Table 2](#)). The power supply is purchased separately³.

You can purchase single **TP-107AVR** machines to work as standalone units or for adding them to a *BoardView™* kit, as defined in [Table 1](#):

Table 1: Single Units

The unit	Recommended Cables
TP-107AVR	One K-NET ⁴ and one CAT 5 cable
RC-108	One K-NET cable
RC-116	One K-NET cable

Table 2: BoardView™ Kit Options

BoardView Kit Name	Machines Included	Recommended Cables		Recommended ⁵ Power Adapter (12V DC) ⁶	Recommended Controller
		STP CAT 5	K-NET ⁷		
2AVR	Two TP-107AVR One TP-122	2	1	1.25A	N/A
4AVR	Four TP-107AVR One TP-122	4	3	2.1A	RC-108
8AVR	Eight TP-107AVR One TP-122	8	7	5A	RC-108/RC-116

1 GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Matrix Switchers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Products

2 Download up-to-date Kramer user manuals from the Internet at this URL: <http://www.kramerelectronics.com>

3 For single machines as well as for the BoardView™ kits

4 Kramer model BC-2T

5 The power supply is not provided with the kit, it can be purchased separately, see [Table 3](#)

6 Adding additional single units to a kit probably changes the power requirements, see [Table 3](#)

7 K-NET™ is a proprietary Kramer protocol for interconnecting Kramer units

Table 3: Connecting a Power Adapter to a System

The quantity of machines in a system	Recommended Power Adapter (12V DC)	Part Number
Up to two TP-107AVR units	1.25A	EU/US: 2535-000005 UK: 2535-000006 Japan: 2535-700005
Three to four TP-107AVR units	2.1A	EU/US: EU/US: 2535-000251 UK: UK: 2535-025121 Japan: Japan: 2535-700251
Five to eight TP-107AVR units ¹	5A	EU/US/UK ² : 2535-000635 Japan: 2535-700635

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables³

2.1 Quick Start

This quick start chart summarizes the basic setup and operation steps.

¹ If more than eight units are used, it is recommended to connect two 5A power adapters to the system


² A desktop power supply with a DC plug. This power supply requires an AC power cord; use the power cables with a US plug for the US, an EU plug for Europe, and a UK plug for the UK

³ The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>

Step 1: Connect the system - see section 5

Connect the:

- 1 K-NET ports
- 2 CAT 5 LINE IN ports
- 3 CAT 5 LINE OUT ports
- 4 Inputs on the TP-107AVR units
- 5 Audio and video outputs

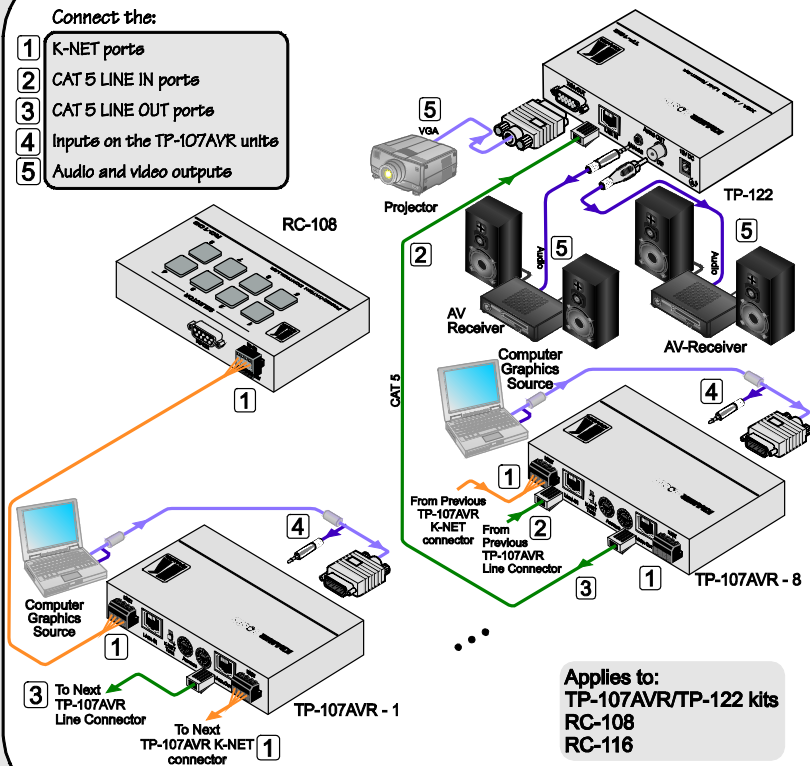

Step 2: Set the rotary switches on the TP-107AVR




ADDRESS

Set the address of each unit. You can set it to up to 256 via the two rotary switches (with Hex numbers from 00 to FF), see section 5.6

Step 3: Connect the power

Step 4: Operation

Press a SELECTOR button on the RC-108 (16 SELECTOR buttons for RC-116) Presentation Controller to grant priority to a TP-107AVR unit.

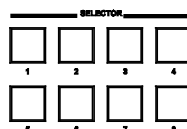

3 Overview

This section describes:

- The **TP-107AVR/TP-122** *BoardView™* kits, see [Section 3.1](#)
- The **RC-108** and the **RC-116**, presentation controllers, see [Section 3.2](#)
- Using shielded twisted pair (STP)/unshielded twisted pair (UTP), see [Section 3.3](#)
- The Power Connect™ feature, see [Section 3.4](#)
- Recommendations for achieving the best performance, see [Section 3.5](#)

3.1 About the TP-107AVR/TP-122 Kits

The **TP-107AVR** is an *XGA/Audio Line Transmitter*¹ that accepts a computer graphics¹ video signal and an analog audio signal and transmits them over a CAT 5 cable.

The **TP-122** is an *XGA/Audio Line Receiver*² that receives the coded CAT 5 signal transmitted by a **TP-107AVR** decodes it and converts it to XGA, stereo analog and S/PDIF digital audio outputs.

You can use a single **TP-107AVR** unit together with the **TP-122** to configure an XGA/Audio Line to Twisted Pair Transmitter and Receiver system.

The *BoardView™* kits include two, four or eight³ **TP-107AVR** units that can be interconnected (via CAT 5 and K-NET™ cables) and each assigned an address number⁴. Pressing an ONLINE button on any of the interconnected machines transmits the signal from that machine to the **TP-122** receiver, which is also connected to the system (see [Figure 1](#)). The signal is then decoded on the **TP-122** and converted to an XGA output and audio outputs. If the ONLINE button is pressed simultaneously on several machines, the machine with the highest address number transmits the signal to the receiver (for example, address number 5 has priority over address number 1).

If a controller (for example, the **RC-108/RC-116** *Presentation Controller*, see [Section 3.2](#)) is connected to the *BoardView™* kit, it can be used to determine which machine in the chain has access to the **TP-122**.

1 The terminology XGA is used throughout this manual. This implies any RGBHV signal on a 15-pin HD computer graphics video connector having a resolution from VGA up to and including UXGA

2 You can download the Kramer TP-122 user manual at: <http://www.kramerelectronics.com>

3 Single TP-107AVR units can be added to a kit (up 16 units in a chain)

4 A priority number

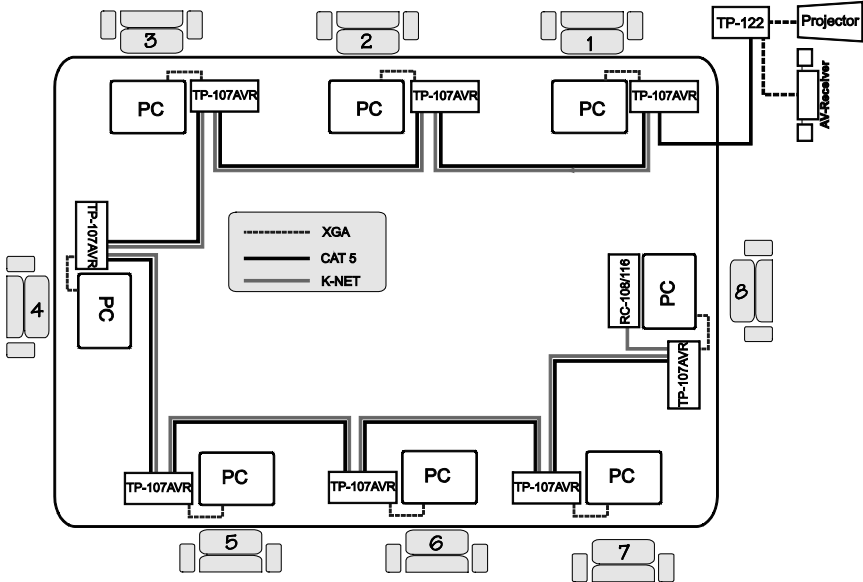


Figure 1: TP-107AVR/TP-122 Configuration

The **TP-107AVR** includes:

- A LINE IN CAT 5 connector, that connects to the LINE OUT CAT 5 connector on the previous *Line Transmitter*
- A LINE OUT CAT 5 connector, that connects to a receiver (for example, the **TP-122**) or to the next *Line Transmitter* in the chain
- A pair of rotary selector switches for setting the ADDRESS (see [Section 5.6](#))

In addition, the **TP-107AVR**:

- Must be controlled via KNET
- Has a resolution of up to UXGA
- Is 12V DC fed

The **TP-122**:

- Can power—or be powered by—the transmitter over the same CAT 5 cable (see [Section 3.4](#))
- Can change the polarity of decoding H and V Sync for video
- Includes EQ. and level controls
- Allows an operation range of more than 300ft (more than 100m) over standard CAT 5 cable
- Is 12V DC fed

3.2 Controlling via the RC-108 and RC-116 Presentation Controllers

The **RC-108** and **RC-116** are presentation controllers designed specifically to control a *BoardView*[™] system¹. Each presentation controller has the appropriate number of input selector buttons², an RS-485 and 12V DC port and an RS-232 9-pin D-sub port for firmware upgrade.

3.3 Shielded Twisted Pair (STP)/Unshielded Twisted Pair (UTP)

We recommend that you use Shielded Twisted Pair (STP) cable, and stress that the compliance to electromagnetic interference was tested using STP cable. There are different levels of STP cable available, and we advise you to use the best quality STP cable that you can afford. Our non-skew-free cable, Kramer **BC-STP** is intended for analog signals where skewing is not an issue.

In cases where there is skewing, our Unshielded Twisted Pair (UTP) skew-free cable, Kramer **BC-XTP**, may be advantageous, and UTP cable might also be preferable for long range applications. In any event when using UTP cable, it is advisable to ensure that the cable is installed far away from electric cables, motors and so on, which are prone to create electrical interference.

3.4 About the Power Connect[™] Feature

The Power Connect feature applies as long as the cable can carry power. This feature is available when using STP cable and the distance does not exceed 50m on standard CAT 5 cable. For longer distances, heavy gauge cable should be used³. For units which are connected via RJ-45 connectors, make sure that the shield of the STP cable is connected to the metal casing of the connectors on both ends of the cable. For units which are connected via terminal block connectors, the shield of the STP cable must be connected to a ground terminal on the units at both ends (use the ground terminal of the power supply connection if necessary).

For a CAT 5 cable exceeding a distance of 50m, separate power supplies should be connected to the transmitter and to the receiver simultaneously.

1 Up to eight and up to 16 units, respectively


2 Eight and 16 buttons, respectively

3 CAT 5 cable is still suitable for the video/audio transmission, but not for feeding the power at these distances

3.5 Recommendations for Achieving the Best Performance

To achieve the best performance:

- Use only good quality connection cables¹ to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables).
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality and position your Kramer product away from moisture, excessive sunlight and dust

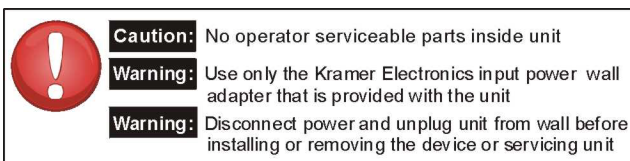

4 Your Line Transmitter, Receiver and Presentation Controllers

This section defines the:

- **TP-107AVR** *XGA/Audio Line Transmitter* (see [Section 4.1](#))
- **TP-122** *XGA/Audio Line Receiver* (see [Section 4.2](#))
- **RC-108** and **RC-116** *Presentation Controllers* (see [Section 4.3](#))

¹ Available from Kramer Electronics on our Web site at <http://www.kramerelectronics.com>

4.1 Your TP-107AVR XGA/Audio Line Transmitter

[Figure 2](#) and [Table 4](#) define the TP-107AVR:

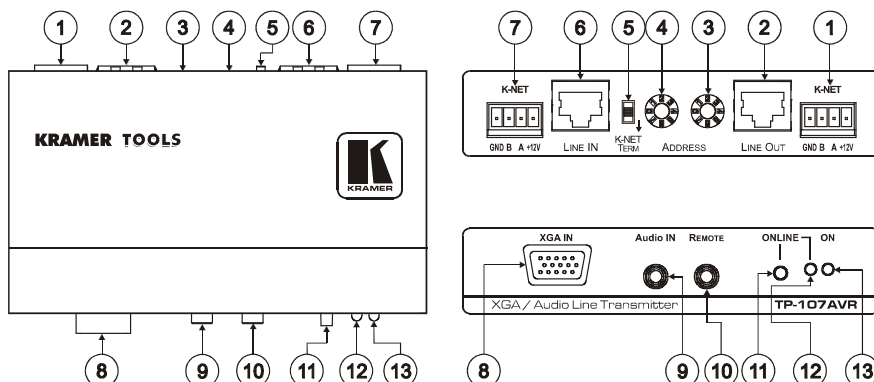


Figure 2: TP-107AVR XGA/Audio Line Transmitter

Table 4: TP-107AVR XGA/Audio Line Transmitter Features

#	Feature	Function
1	K-NET Terminal Block Connector	Connect to the previous or next line transmitter or to a control device. GND is for the ground connection; B (-) and A (+) are for RS-485, and +12V is for powering the unit ¹
2	LINE OUT RJ-45 Connector	Connects to ² the LINE IN RJ-45 connector on the receiver ³ or the next line transmitter
3	ADDRESS Selectors	Rotate to select the address number ⁴
4		
5	K-NET TERM Switch	Set the switch to ON to terminate the K-NET line with 120Ω
6	LINE IN RJ-45 Connector	Connects to ² the LINE OUT RJ-45 connector on the previous line transmitter
7	K-NET Terminal Block Connector	Connect to the previous or next line transmitter or to a control device. GND is for the ground connection; B (-) and A (+) are for RS-485, and +12V is for powering the unit ¹
8	XGA IN 15-pin HD Connector	Connects to the XGA source
9	Audio IN 3.5mm Mini Jack	Connects to the audio source
10	Remote 3.5mm Mini Jack	Connect to an external button for easy on-line connection (for example, when the unit is installed under the table). For the pinout, see Section 7
11	ONLINE Button	Press to access priority
12	ONLINE LED	Lights when gaining priority
13	ON LED	Lights when receiving power

1 The 12V DC power supply (not provided) is used to power the system (see [Table 2](#))

2 Using CAT 5 cable with RJ-45 connectors at both ends (the PINOUT is defined in [Table 9](#) and [Figure 12](#))

3 For example, the Kramer TP-122. You can download this user manual at: <http://www.kramerelectronics.com>

4 From 1 to 256 (see [Section 5.6](#))

4.2 Your TP-122 XGA/Audio Line Receiver

[Figure 3](#) and [Table 5](#) define the **TP-122 XGA/Audio Line Receiver**:

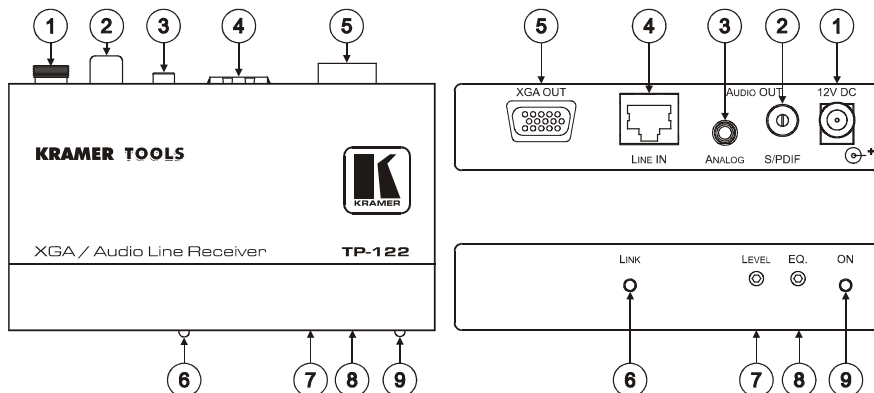


Figure 3: TP-122 XGA/Audio Line Receiver

Table 5: TP-122 XGA/Audio Line Receiver Features

#	Feature	Function
1	12V DC	+12V DC connector for powering the unit
2	AUDIO OUT	S/PDIF RCA connector Connects to the digital audio acceptor
3		ANALOG 3.5mm Mini Jack Connects to the analog audio acceptor
4	LINE IN RJ-45 Connector	Connects to ¹ LINE OUT RJ-45 connector on the TP-107AVR
5	XGA OUT 15-pin HD Connector	Connects to the XGA acceptor
6	LINK LED	Illuminates when receiving the correct input signal
7	LEVEL Trimmer	Adjusts ³ the output signal level
8	EQ. ² Trimmer	Adjusts ³ the cable compensation equalization level
9	ON LED	Illuminates when receiving power

¹ Using an STP CAT 5 cable with RJ-45 connectors at both ends (the PINOUT is defined in [Table 9](#) and [Figure 12](#))

² Degradation and VGA/XGA signal loss can result from using long cables (due to stray capacitance), sometimes leading to a total loss of sharpness in high-resolution signals

³ Use a screwdriver to carefully rotate the trimmer, adjusting the appropriate level

[Figure 4](#) and [Table 6](#) define the underside of the **TP-122 XGA/Audio Line Receiver**:

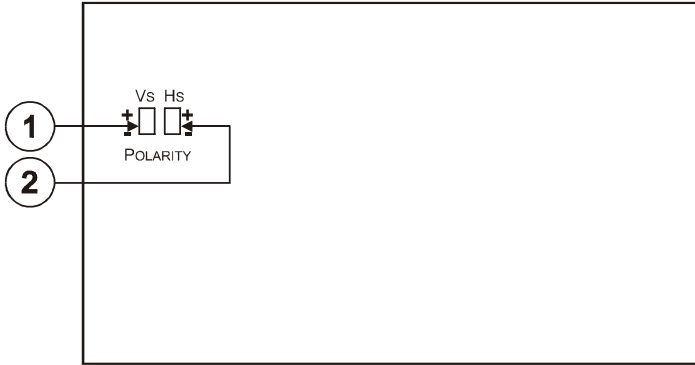


Figure 4: TP-122 XGA/Audio Line Receiver (Underside)

Table 6: TP-122 XGA/Audio Line Receiver (Underside) Features

#	Feature	Function
1	VS Switch	Slide the switch down, to set the V SYNC to negative polarity; slide the switch up ¹ , to set the V SYNC to positive polarity
2	HS Switch	Slide the switch down, to set the H SYNC to negative polarity; slide the switch up ¹ , to set the H SYNC to positive polarity

¹ By default, both switches are set down (for a negative V SYNC and H SYNC polarity)

4.3 Your RC-108/RC-116 Presentation Controller

[Figure 5](#) and [Table 7](#) define the **RC-108**:

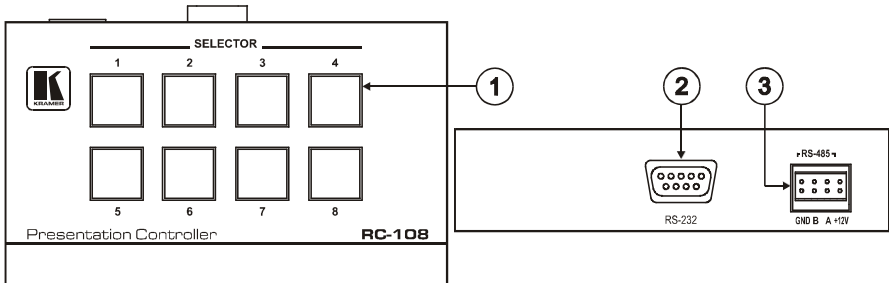


Figure 5: RC-108 Presentation Controller

[Figure 6](#) and [Table 7](#) define the **RC-116**:

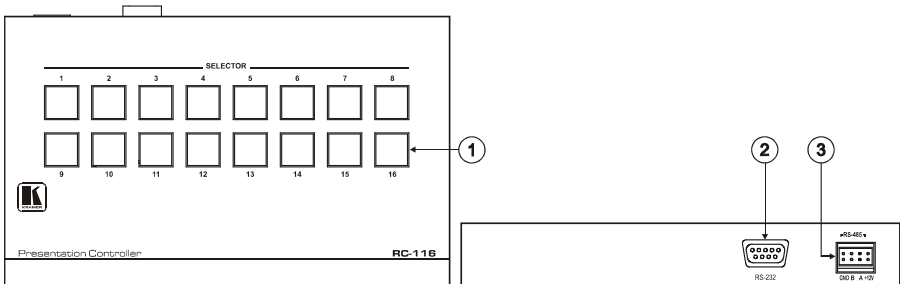


Figure 6: RC-116 Presentation Controller

Table 7: RC-108/RC-116 Presentation Controller Features

#	Feature	Function
1	SELECTOR Buttons ¹	Press to give priority to a TP-107AVR unit, according to its address number Press and hold ² to toggle between releasing control ³ over the TP-107AVR and regaining control
2	RS-232 9-pin D-sub Connector	Connects to a PC for upgrading the firmware
3	RS-485 and 12V DC PINs	GND is for the ground connection; B (-) and A (+) are for RS-485, and +12V is for powering the unit

¹ From 1 to 8 for the RC-108, and from 1 to 16 for the RC-116

² For about 2 seconds

³ For example, to let unit 6 gain control, press the selector button 6 (button 6 illuminates). To let unit 7 gain control, press the selector button 7 (button 7 illuminates and button 6 no longer illuminates). To release control over the units, press and hold the selected button (button 7 in this example) until it no longer illuminates

[Figure 7](#) and [Figure 8](#) illustrate the underside of the **RC-108** and the **RC-116**, respectively, as defined in [Table 8](#):

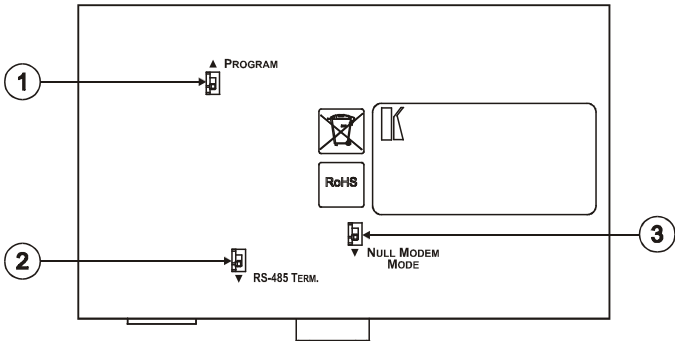


Figure 7: RC-108 Underside Panel

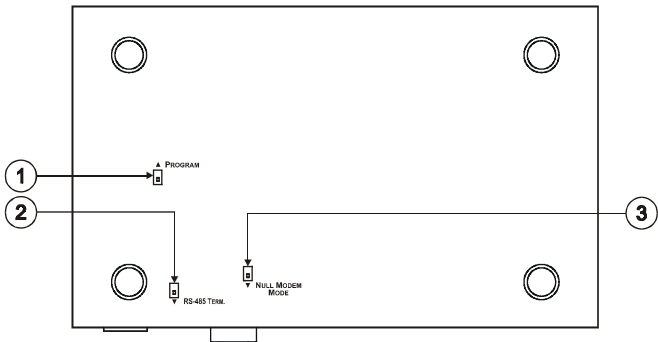


Figure 8: RC-116 Underside Panel

Table 8: RC-108/RC-116 (Underside Panel) Features

#	Feature	Function
1	<i>PROGRAM</i> Switch	Slide downwards for normal operation, slide upwards to <i>PROGRAM</i> to upgrade to the latest Kramer firmware (see Section 8),
2	<i>RS-485 TERM.</i> Switch	Slide the switch downwards to terminate the RS-485 Line with 120Ω
3	<i>NULL MODEM MODE</i> Switch	To connect a PC to the unit using a null-modem adapter, slide the NULL MODEM MODE switch downwards, otherwise connect without a null-modem adapter

5 Configuring a TP-107AVR System

This section describes how to:

- Connect the **TP-107AVR** (see [Section 5.1](#))
- Configure a **TP-107AVR/TP-122 BoardView™** kit (see [Section 5.2](#))
- Connect the **RC-108/RC-116** Presentation Controller to the *BoardView™* kit (see [Section 5.3](#))
- Wire the CAT 5 LINE IN/LINE OUT RJ-45 connectors (see [Section 5.4](#))
- Connect via the K-NET terminal block connector (see [Section 5.5](#))
- Set the address number (see [Section 5.6](#))

5.1 Connecting the TP-107AVR/TP-122 Transmitter/Receiver System

To connect the **TP-107AVR XGA/Audio Line Transmitter** with the **TP-122 XGA/Audio Line Receiver**, as the example in [Figure 9](#) illustrates, do the following:

1. On the **TP-107AVR**, connect an XGA source (for example, a computer graphics source) to the XGA IN 15-pin HD computer graphics connector and an audio source to the audio IN 3.5mm mini jack, for example, using a Kramer C-GMA/GMA cable (VGA 15-pin HD (M) + audio jack to VGA 15-pin HD (M) + audio jack)¹.
2. On the **TP-122**, connect the XGA OUT 15-pin HD (F) connector to the XGA acceptor (for example, a display), and connect the AUDIO OUT S/PDIF RCA connector to the digital audio acceptor (for example, an AV receiver), and the ANALOG 3.5mm mini jack to the analog audio acceptor (for example, a stereo audio recorder).
3. Connect the LINE OUTPUT RJ-45 connector on the **TP-107AVR** to the LINE IN RJ-45 connector on the **TP-122**, via STP cabling² (with a range of up to 300ft (100m)), see [Section 5.4](#).
4. Connect a 12V DC power supply to each power socket on the **TP-107AVR** and the **TP-122**, and connect the power supplies to the mains electricity.
The signal from the XGA source is transmitted via CAT 5 cable, decoded and converted at the XGA OUT 15-pin HD (F) connector to the XGA acceptor.

¹ Not supplied. The full list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>. Alternatively, you can connect an XGA source to the XGA IN 15-pin HD computer graphics connector, and a separate audio source to the AUDIO IN 3.5mm mini jack

² The Kramer BC-STP cable is recommended

5. On the **TP-122**:

- Adjust¹ the video output signal level and/or cable compensation equalization level, if required
- If necessary, set the H SYNC and V SYNC switches² on the underside

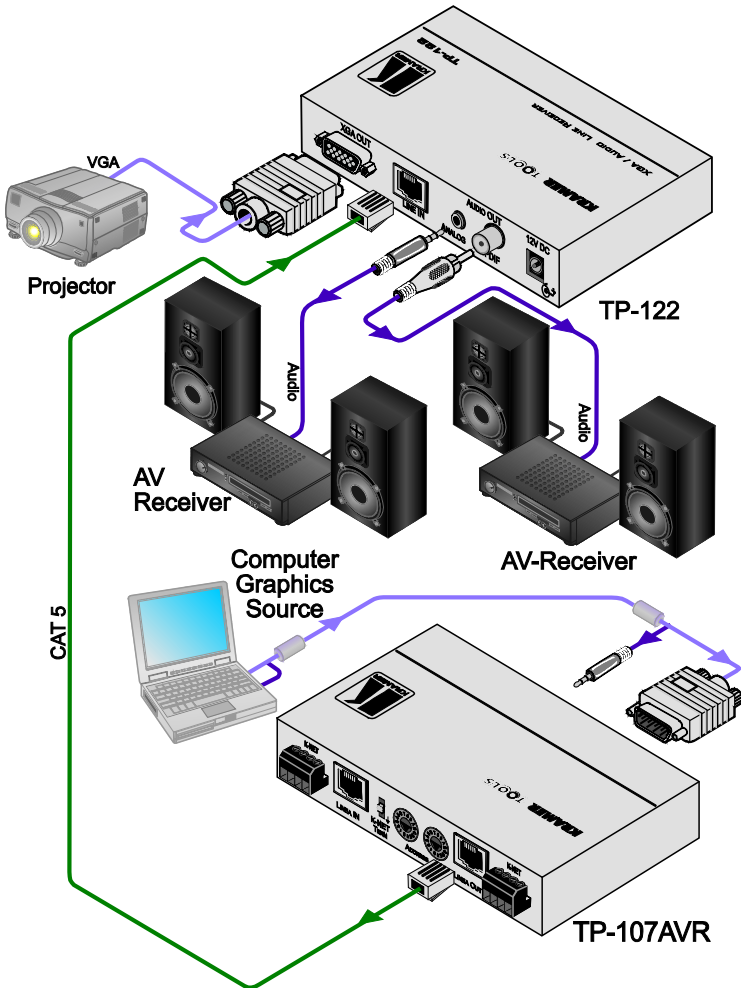


Figure 9: Connecting the XGA/Audio Line Transmitter/Receiver System

¹ Use a screwdriver to carefully rotate the trimmer, adjusting the appropriate level

² By default, both switches are set down (for negative V SYNC and H SYNC polarity)

5.2 Connecting the TP-107AVR/TP-122 BoardView™ Kit

To connect the **TP-107AVR/TP-122 BoardView™** kit as illustrated in the example in [Figure 10](#), do the following:

1. Connect an XGA source (for example, a computer graphics source) to the XGA IN 15-pin HD computer graphics connector and an audio source to the audio IN 3.5mm mini jack, for example, using a Kramer C-GMA/GMA cable (VGA 15-pin HD (M) + audio jack to VGA 15-pin HD (M) + audio jack)¹.
2. Connect the LINE OUT RJ-45² connector to the LINE IN RJ-45 connector on the next **TP-107AVR** in the chain or to the LINE IN RJ-45 connector of a receiver (for example, the Kramer **TP-122**), via STP cabling³. The total range of the connected units should be no more than 300ft (100m).
3. Connect the LINE OUT RJ-45 connector of the previous **TP-107AVR** unit to the LINE IN RJ-45 connector on the **TP-107AVR**.
4. Connect the K-NET⁴ port to the previous and the next **TP-107AVR** unit or to the **RC-108 Presentation Controller**⁵.
5. Set an address number for each **TP-107AVR** unit via the two potentiometers (see [Section 5.6](#)).
6. Connect the 12V DC power supply (see [Table 3](#)) to the power socket and connect the power supply to the mains electricity.

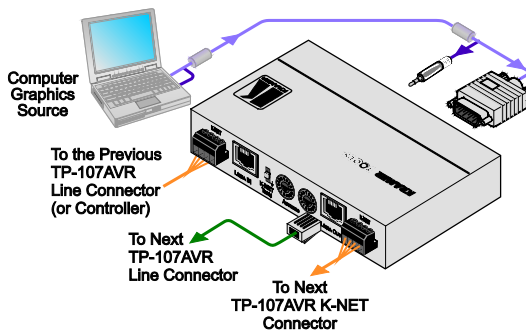


Figure 10: Connecting the TP-107AVR

1 Not supplied. The full list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>. Alternatively, you can connect an XGA source to the XGA IN 15-pin HD computer graphics connector, and a separate audio source to the AUDIO IN 3.5mm mini jack

2 For details of how to wire a CAT 5 LINE IN/LINE OUT RJ-45 connector, see [Section 5.4](#)

3 The Kramer BC-STP cable is recommended

4 The 12V DC power supply (provided) is used to power the system (see [Table 2](#))

5 Or alternatively to the RC-116 (see [Section 3.2](#))

5.3 Configuring the TP-107AVR/TP-122 Kit with the RC-108¹

To configure a presentation system as illustrated in the example in [Figure 11](#), do the following:

1. Connect the computer graphics source on each **TP-107AVR** machine in the chain (see [Section 5.1](#)).
2. Interconnect the **TP-107AVR** machines via the CAT 5 and K-NET cables.
3. Connect the **RC-108 Presentation Controller** to the chain via the K-NET port².
4. Connect the last **TP-107AVR** unit to a receiver (for example, the Kramer **TP-122**³), which is connected to an acceptor (for example, a projector and an AV receiver with speakers).
5. Set the RS-485 TERM switch on the first and the last unit to ON.
6. Set an address number for each **TP-107AVR** unit via the two rotary switches (see [Section 5.6](#)).

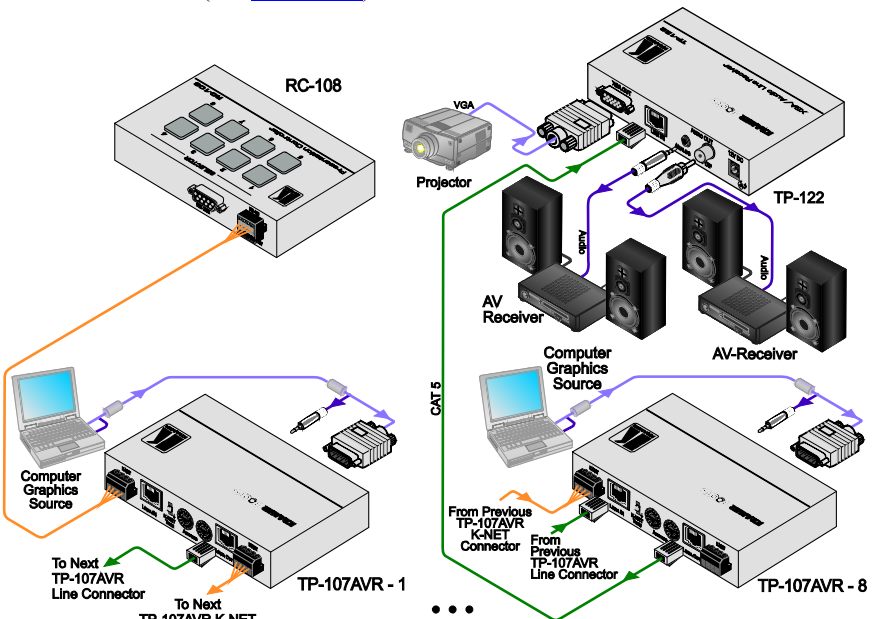


Figure 11: Configuring the TP-107AVR/TP-122/RC-108 System

¹ From this section on, the RC-108 applies also to the RC-116, unless stated otherwise

² RS-485 on RC-108

³ Refer to the separate user manual, which can be downloaded at <http://www.kramerelectronics.com>


5.4 Wiring the CAT 5 LINE IN/LINE OUT RJ-45 Connectors

[Table 9](#) and [Figure 12](#) define the STP CAT 5 PINOUT, using a straight pin-to-pin cable with RJ-45 connectors:

Table 9: CAT 5 PINOUT

EIA /TIA 568A		EIA /TIA 568B	
PIN	Wire Color	PIN	Wire Color
1	Green/White	1	Orange/White
2	Green	2	Orange
3	Orange/White	3	Green/White
4	Blue	4	Blue
5	Blue/White	5	Blue/White
6	Orange	6	Green
7	Brown/White	7	Brown/White
8	Brown	8	Brown
Pair 1		4 and 5	
Pair 2		3 and 6	
Pair 3		1 and 2	
Pair 4		3 and 6	
Pair 4		7 and 8	

Figure 12: CAT 5 PINOUT

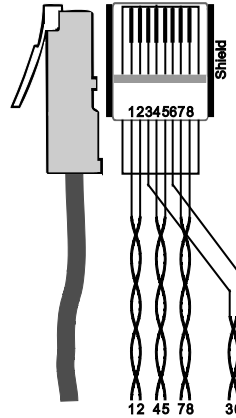

5.5 Connecting via the K-NET™

The TP-107AVR units connect to the RC-108/RC-116 controller via the K-NET ports, as illustrated in [Figure 13](#).

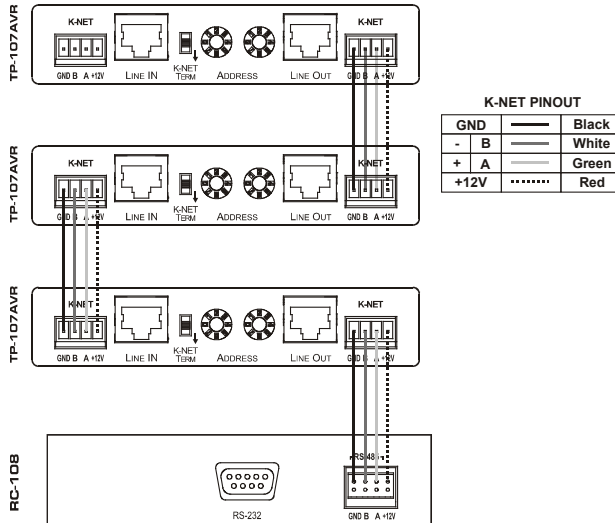


Figure 13: Wiring the RS-485 Connector

5.6 Setting the Address Number of the TP-107AVR

A maximum of 256 addresses can be set via the two rotary switches¹ (with each Hex number ranging from 0 to F). When using the Kramer **RC-108** or **RC-116** controller, the address numbers are set from 1 to 8 or from 1 to 16 respectively² (in accordance with the numbers on the rotary switches on the controller), as illustrated in [Figure 14](#) and defined in [Table 10](#).



ADDRESS

Figure 14: Rotary Switch Settings

Table 10: Rotary Switch Setting Features

Address #	Left	Right
1	0	0
2	0	1
3	0	2
4	0	3
5	0	4
6	0	5
7	0	6
8	0	7

Address #	Left	Right
9	0	8
10	0	9
11	0	A
12	0	B
13	0	C
14	0	D
15	0	E
16	0	F

The option to set the address numbers up to 256 is useful when preparing meetings, for example, in hotels or conference centers. When one conference center uses many **TP-107AVR** units (for example, 32 units), preset each to a different address number (any number from 1 to 256). The preset addresses make it easy to setup a *BoardView™* system. For example, to setup a 16-unit system, take any of the available machines and connect them (as described in [Section 5.5](#)) in any order without having to worry about a duplicate address number. Such a system can be used without connecting the **RC-108/RC-116 Presentation Controller**³, letting each participant in the meeting gain access by pressing the ONLINE button.

1 To maintain high quality video transmission, using more than 16 units in a system is not recommended
2 For higher address numbers refer to a decimal to Hex converter. For example, address number 125 is 7D
3 To use the RC-108/RC-116, the address numbers on the TP-107AVR units must be set from 1 to 8/1 to 16, respectively

6 Controlling the TP-107AVR

The **TP-107AVR** can be used in a transmitter and receiver system as described in [Section 3.1](#), or set up as a controller-less system (see example in [Section 5.6](#)).

You can use the **RC-108/RC-116** (see [Section 6.1](#)) or any other RS-485 based controller¹ to control the *BoardView*TM system (see [Section 6.2](#)).

6.1 Controlling the TP-107AVR/TP-122 Kit via the RC-108

The **RC-108** unit, when connected to a chain of **TP-107AVR** units, controls the system by granting access to the projector and overriding the individual **ONLINE** buttons on the **TP-107AVR** units.

If a **SELECTOR** button on the **RC-108** is pressed and held for about two seconds, the **RC-108** loses control over the **TP-107AVR** units in the chain. To regain control, press and hold once again.

6.2 Controlling the TP-107AVR/TP-122 Kit via an RS-485 Controller

To control a *BoardView*TM via an RS-485 controller (see to [Section 6.2.1](#) for the RS-485 communication Protocol), for example, the Kramer **RC-8IR**² *Room Controller*, connect the chain of **TP-107AVR** units to the RS-485 terminal blocks (see [Figure 15](#)).

¹ For example, the Kramer RC-8IR Room Controller

² Refer to the separate user manual, which can be downloaded at <http://www.kramerelectronics.com>

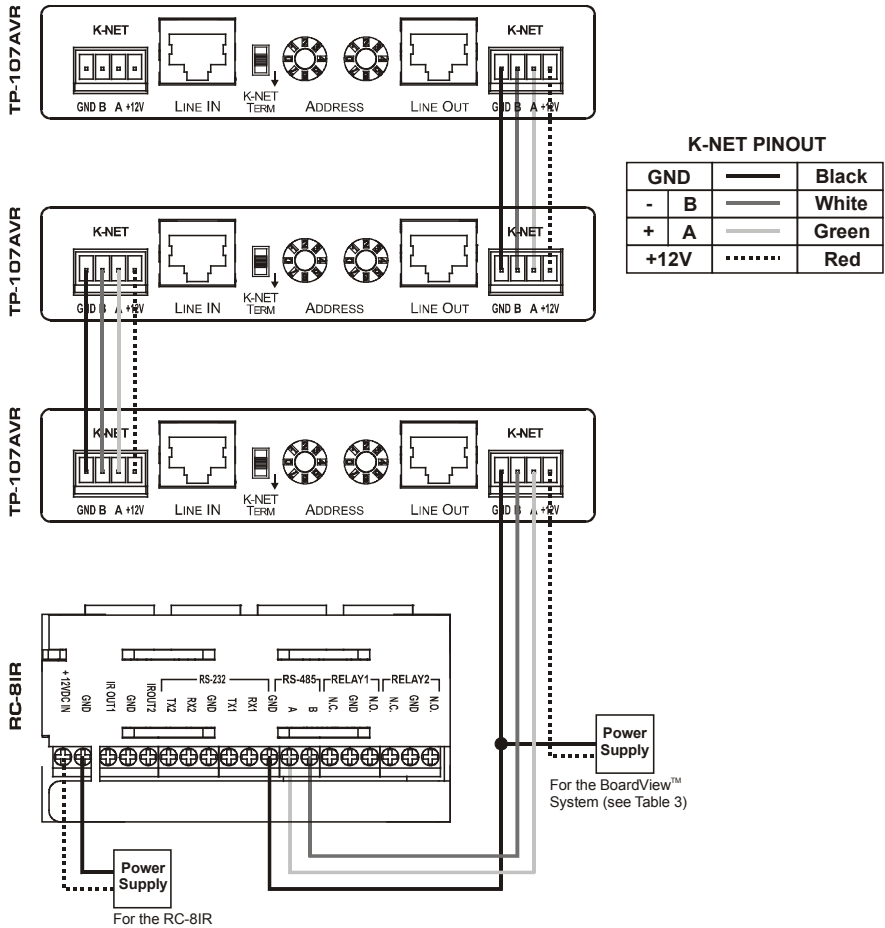


Figure 15: Wiring to an RS-485 Controller

You can also connect the same power supply to the BoardView™ System and the **RC-8IR** (see [Table 3](#))

6.2.1 RS-485 Communication Protocol

Use the communication protocol to control the **TP-107AVR** units via an RS-485 controller. The communication settings are: 9600 bps, 8 data bits, no parity, 1 stop bit and no flow control.

[Table 11](#) defines the communication protocol for address numbers 0 to 127.

Table 11: RS-485 Communication Protocol (Address Number 0 – 127)

Command:	Command 1	Command 2	Command 3	Command 4	Description:
Select a TP-107AVR machine according to its address number	H02	H81	H80 + Address 1	H81	The VGA input of the selected TP-107AVR device is activated. VGA inputs of other TP-107AVR units in the chain are blocked
Free Speech	H02	H82	H80 + Address 1	H81	Following this command, any TP-107AVR in the chain can be activated by pressing the ONLINE button. This state is cancelled after the "Select TP-107AVR Machine" command is sent to any TP-107AVR in the chain
Turn OFF a TP-107AVR	H02	H83	H80 + Address 1	H81	The VGA input of the selected TP-107AVR device is blocked
The TP-107AVR replies:					
In Free Speech mode the ONLINE button is ON	H45	H81	H80 +Addr	H81	Reply sent from the specific TP-107AVR to the controller
In Free Speech mode the ONLINE button is OFF	H45	H80	H80 +Addr	H81	Reply sent from the specific TP-107AVR to the controller

¹ The address number of the selected TP-107AVR as set by the rotary address switches (see [Section 5.6](#))

[Table 12](#) defines the Communication protocol for address numbers 128 to 255

Table 12: RS-485 Communication Protocol (Address Number 128 – 255)

Command:	Command 1	Command 2	Command 3	Command 4	Description:
Select a TP-107AVR machine according to its address number	H02	H81	Address1	HC1	The VGA input of the selected TP-107AVR device is activated. VGA inputs of other TP-107AVR units in the chain are blocked
Free Speech	H02	H82	Address1	HC1	Following this command, any TP-107AVR in the chain can be activated by pressing the ONLINE button. This state is cancelled after the "Select TP-107AVR Machine" command is sent to any TP-107AVR in the chain
Turn OFF a TP-107AVR	H02	H83	Address1	HC1	The VGA input of the selected TP-107AVR device is blocked

The **TP-107AVR** replies:

In Free Speech mode the ONLINE button is ON	H45	H81	Address1	HC1	Reply sent from the specific TP-107AVR to the controller
In Free Speech mode the ONLINE button is OFF	H45	H80	Address1	HC1	Reply sent from the specific TP-107AVR to the controller


For example:

- Select **TP-107AVR** machine 5:
Hx02,Hx81,Hx85,Hx81
- Select **TP-107AVR** machine 200 (HxC8):
Hx02,Hx81,HxC8,HxC1
- Select **TP-107AVR** machine 100 (Hx64):
Hx02,Hx81,HxE4,Hx81
Calculation – Hx80+Hx64 = HxE4

7 Installing a Remote Button

You can connect the remote 3.5mm mini jack to an external button for easy on-line connection when the unit is installed, say, under the table. [Table 13](#) defines the remote pinout:

Table 13: Remote PINOUT

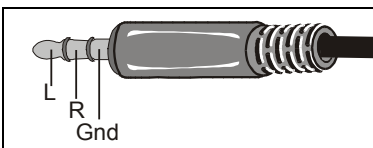	PIN	Function
	Left	LED
	Right	Key switch
	Gnd	Ground

8 Flash Memory Upgrade

The **RC-108**¹ firmware is located in FLASH memory, which lets you upgrade² to the latest Kramer firmware version in minutes! The process involves:

- Downloading from the Internet (see [Section 8.1](#))
- Connecting the PC to the RS-232 port (see [Section 8.2](#))
- Upgrading firmware (see [Section 8.3](#))

8.1 Downloading from the Internet

You can download the up-to-date file³ from the Internet. To do so:

1. Go to our Web site at www.kramerelectronics.com and download the file: “*FLIP_RC108.zip*” from the Technical Support section.
2. Extract the file: “*FLIP_RC108.zip*” to a folder (for example, C:\Program Files\Kramer Flash).
3. Create a shortcut on your desktop to the file: “*FLIP.EXE*”.

8.2 Connecting the PC to the RS-232 Port

Before installing the latest Kramer firmware version on a **RC-108** unit, do the following:

1. Connect the RS-232 9-pin D-sub side panel port (see [Section 8.2.1](#)).
2. Slide the underside PROGRAM switch to ON.
3. Connect the power.

8.2.1 Connecting the RC-108 to a PC via RS-232

To connect a PC to the **RC-108/RC-116** unit, using the null-modem adapter provided *with* the machine (recommended):

- Connect the null-modem adapter to the RS-232 9-pin D-sub port on the rear panel of the Master **RC-108/RC-116**. Connect the null-modem adapter to the RS-232 9-pin D-sub port on your PC with a 9-wire flat cable

¹ This section applies also to the RC-116

² Upgrade should be carried out by skilled technical personnel. Failure to upgrade correctly results in the malfunction of the machine

³ The files indicated in this section are given as an example only. File names are liable to change from time to time

To connect a PC to the **RC-108/RC-116** unit, *without* using a null-modem adapter:

- Connect the RS-232 9-pin D-sub port on your PC to the RS-232 9-pin D-sub rear panel port on the master **RC-108/RC-116** unit, as [Figure 16](#) illustrates

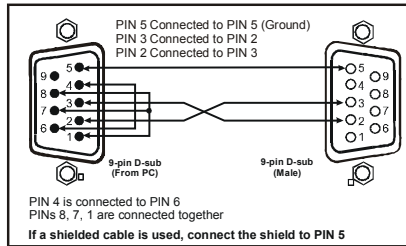


Figure 16: Connecting a PC without using a Null-Modem Adapter

8.3 Upgrading the Firmware

Follow these steps to upgrade the firmware:

1. Double click the desktop icon: “*Shortcut to FLIP.EXE*”.
 The Splash screen appears as follows:

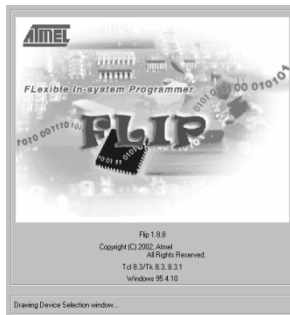


Figure 17: Splash Screen

2. After a few seconds, the Splash screen is replaced by the “*Atmel – Flip*” window:

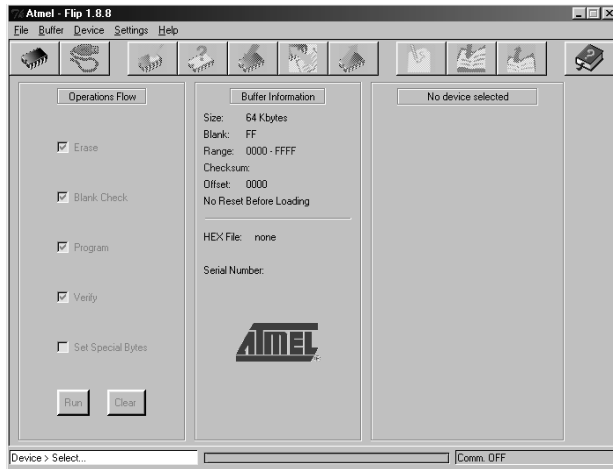


Figure 18: Atmel – Flip Window

3. Press the keyboard shortcut key *F2* (or select the “*Select*” command from the *Device* menu, or press the integrated circuit icon in the upper right corner of the window).
The “*Device Selection*” window appears:

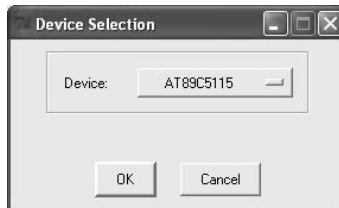


Figure 19: Device Selection Window

4. Click the button next to the name of the device and select from the list: AT89C51RD2:

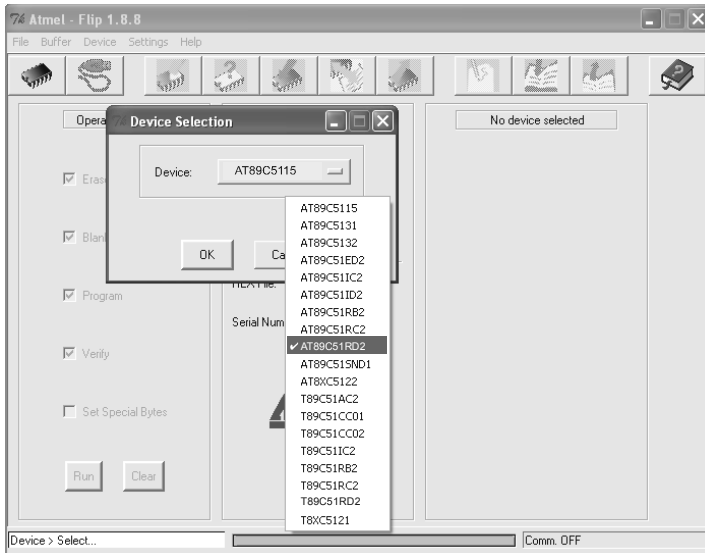


Figure 20: Device Selection Window

5. Click OK and select “Load Hex” from the File menu.

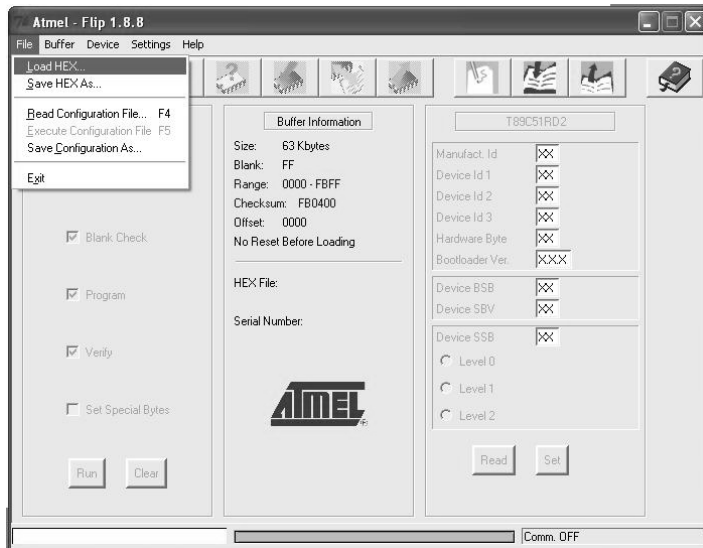


Figure 21: Loading the Hex

6. The Open File window opens. Select the correct HEX file that contains the updated version of the firmware for **RC-108** (for example **44M_V1p2.hex**) and click Open.
7. Press the keyboard shortcut key *F3* (or select the “*Communication/RS232*” command from the *Settings* menu, or press the keys: *Alt SCR*).
The “*RS232*” window appears. Change the COM port according to the configuration of your computer and select the 9600 baud rate:

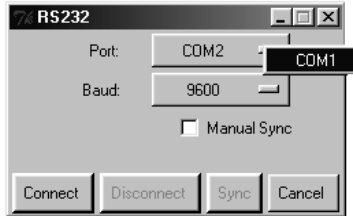


Figure 22: RS-232 Window

8. Click Connect.
In the “*Atmel – Flip*” window, in the *Operations Flow* column, the *Run* button is active, and the name of the chip appears as the name of the third column: *AT89C51RD2*.
Verify that in the *Buffer Information* column, the “*HEX File: RC108.hex*” appears.

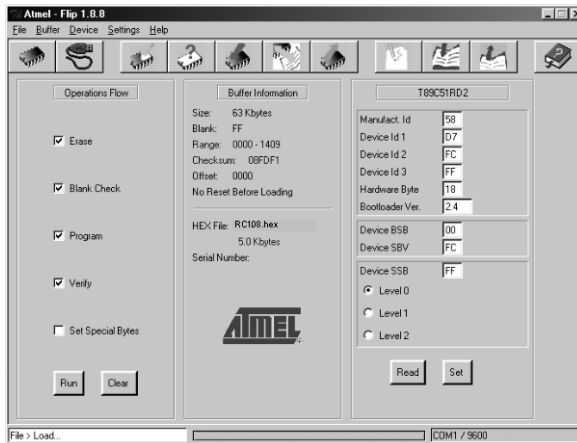


Figure 23: Atmel – Flip Window (Connected)

9. Click *Run*.

After each stage of the operation is completed, the check-box for that stage becomes colored green¹.

When the operation is completed, all 4 check-boxes are colored green and the status bar message: *Memory Verify Pass* appears²:

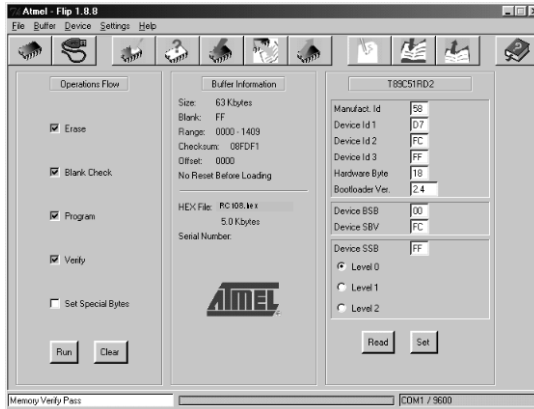


Figure 24: Atmel – Flip Window (Operation Completed)

10. Close the “Atmel – Flip” window.

11. Disconnect the power on the **RC-108**.12. If required, disconnect the RS-232 rear panel port on the **RC-108** unit from the null-modem adapter.

13. Slide the underside PROGRAM switch to the normal position.

14. Connect the power to the **RC-108**.

¹ See also the blue progress indicator on the status bar

² If an error message: “Not Finished” shows, click Run again

9 Technical Specifications

[Table 14](#) and [Table 15](#) define the **TP-107AVR/RC-108/RC-116** technical specifications¹.

Table 14: Technical Specifications of the TP-107AVR

INPUTS:	1 XGA on a 15-pin HD connector, 1 CAT 5 on an RJ-45 connector (LINE IN) 1 stereo on 3.5mm phones	
OUTPUTS:	1 CAT 5 on an RJ-45 connector (LINE OUT)	
MAX. OUTPUT LEVEL:	VIDEO: 1.3Vpp	AUDIO: 3Vpp
BANDWIDTH (-3dB):	150MHz	AUDIO: 20kHz
DIFF. GAIN:	2.5%	
DIFF PHASE:	0.5Deg.	
K-FACTOR:	0.2%	
S/N RATIO ² :	VIDEO: 61dB @5MHz	AUDIO: 77dB @1MHz
CROSSTALK (all hostile):	VIDEO: -43dB @6MHz, video into audio	
CONTROLS:	KNET (RS-485), RS-485 TERM slide switch, remote button	
COUPLING:	AC	
AUDIO THD + NOISE:	0.152% @1MHz	
AUDIO 2nd HARMONIC:	0.009%	
POWER SOURCE:	12V DC, 180mA (for BoardView™ kits, see Table 3)	
DIMENSIONS:	12cm x 6.95cm x 2.44cm (4.7" x 2.74" x 0.96"), W, D, H	
WEIGHT:	0.3kg (0.66lbs) approx.	
ACCESSORIES:	Mounting bracket, 19" rack adapter	
OPTIONS:	Power supply, K-NET and CAT 5 cables (see Table 2)	

Table 15: Technical Specifications of the RC-108/RC-116

CONTROLS:	RS-485, RS-232
DIMENSIONS:	RC-108: 12cm x 6.95cm x 2.44cm (4.7" x 2.74" x 0.96"), W, D, H RC-116: 18.4cm x 11.4cm x 2.65cm (7.24" x 4.5" x 1.05"), W, D, H
WEIGHT:	RC-108: 0.3kg (0.66lbs) approx. RC-116: 0.6kg (1.32lbs) approx.

¹ Specifications are subject to change without notice

² Local video input into the chain when in the offline mode

LIMITED WARRANTY

We warrant this product free from defects in material and workmanship under the following terms.

HOW LONG IS THE WARRANTY

Labor and parts are warranted for seven years from the date of the first customer purchase.

WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

1. Any product which is not distributed by us or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the Web site www.kramerelectronics.com.
2. Any product, on which the serial number has been defaced, modified or removed, or on which the WARRANTY VOID IF TAMPERED sticker has been torn, reattached, removed or otherwise interfered with.
3. Damage, deterioration or malfunction resulting from:
 - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
 - ii) Product modification, or failure to follow instructions supplied with the product
 - iii) Repair or attempted repair by anyone not authorized by Kramer
 - iv) Any shipment of the product (claims must be presented to the carrier)
 - v) Removal or installation of the product
 - vi) Any other cause, which does not relate to a product defect
 - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

1. Removal or installations charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
3. Shipping charges.

HOW YOU CAN GET WARRANTY SERVICE

1. To obtain service on you product, you must take or ship it prepaid to any authorized Kramer service center.
2. Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
3. For the name of the nearest Kramer authorized service center, consult your authorized dealer.

LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

1. Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or:
2. Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place.

NOTE: All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has been tested to determine compliance with the requirements of:

- EN-50081: "Electromagnetic compatibility (EMC);
generic emission standard.
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard.
Part 1: Residential, commercial and light industry environment".
- CFR-47: FCC* Rules and Regulations:
Part 15: "Radio frequency devices
Subpart B Unintentional radiators"

CAUTION!

- Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- Use the supplied DC power supply to feed power to the machine.
- Please use recommended interconnection cables to connect the machine to other components.
* FCC and CE approved using STP cable (for twisted pair products)



For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com, where updates to this user manual may be found. We welcome your questions, comments and feedback.



Caution

Safety Warning:

Disconnect the unit from the power supply before opening/servicing.



Kramer Electronics, Ltd.

Web site: www.kramerelectronics.com

E-mail: info@kramerel.com

P/N: 2900-000534 REV 5